

LIFTING CAPACITY



Excavator equipped with TOPS/FOPS cabin and rubber crawlers.

r: Reach from swing center line : ft-in/(mm)

h: Lift point height : ft-in/(mm)

w: Lifting capacity : lbs/(kg)

P: Load point

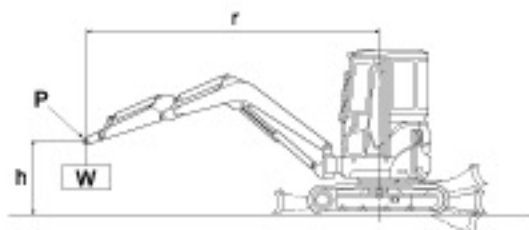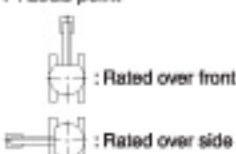

- The rated lifting capacities that are indicated below are based on ISO 10567 and do not exceed 87% of the excavator's hydraulic lifting capacity or 75% of its static tilt load (tipping load) capacity.
- The following operating criteria are also applicable to the calculation of these maximum loads:
 - The "load point" is the location of the front bolt on the arm.
 - The three indicated machine positions are :
 - arm over the front end (blade down),
 - arm over the front end (blade up), and
 - arm over the side (blade up).
 - The operating cylinder is the boom cylinder.
- The weight of the excavator's bucket, hook, sling and other lifting accessories have been taken into consideration when calculating these maximum loads.

SV100

LIFT POINT HEIGHT h:ft-in (mm)	r: REACH ft-in (mm)				r: REACH ft-in (mm)				r: REACH ft-in (mm)			
	RATED LIFT CAPACITY OVER FRONT BLADE DOWN lbs (kg)				RATED LIFT CAPACITY OVER FRONT BLADE UP lbs (kg)				RATED LIFT CAPACITY OVER SIDE BLADE UP lbs (kg)			
	MAX	16'5" (5000)	13'1" (4000)	9'10" (3000)	MAX	16'5" (5000)	13'1" (4000)	9'10" (3000)	MAX	16'5" (5000)	13'1" (4000)	9'10" (3000)
16'5"(5000)	*3881(1760)				*3881(1760)				*3881(1760)			
13'1"(4000)	*3726(1690)	*3682(1670)	*3749(1700)		*3726(1690)	*3682(1670)	*3749(1700)		2644(1290)	*3682(1670)	*3749(1700)	
9'10"(3000)	*3783(1720)	*3891(1810)	*4388(1990)		2911(1320)	3396(1540)	*4388(1990)		2403(1090)	3109(1410)	*4388(1990)	
6'7"(2000)	*3837(1740)	*4432(2010)	*5424(2460)	*7673(3480)	2624(1190)	3749(1700)	*5424(2460)	*7673(3480)	2205(1000)	3065(1390)	4410(2000)	*7673(3480)
3'3"(1000)	*3837(1740)	*4939(2240)	*6593(2990)	*9327(4230)	2556(1160)	3572(1620)	5248(2360)	7784(3530)	2093(960)	2977(1350)	4256(1930)	6196(2810)
Ground(0)	*3903(1770)	*4939(2240)	*6681(3030)	*9415(4270)	2602(1180)	3374(1530)	4763(2160)	7431(3370)	2205(1000)	2800(1270)	3903(1770)	5809(2660)
-3'3"(-1000)	*3749(1700)	*4808(2090)	*6395(2900)	*8842(4010)	2967(1300)	3330(1510)	4763(2160)	7563(3430)	2293(1040)	2690(1220)	3903(1770)	5865(2660)
-6'7"(-2000)	*3749(1700)		*5446(2470)	*7122(3230)	*3749(1700)		4697(2130)	6306(2860)	2911(1320)		3837(1740)	5665(2660)

Note : The maximum loads marked with an asterisk (*) were limited by the Excavator's hydraulic lifting capacity rather than by its static tilt load (tipping load) capacity.

STANDARD EQUIPMENT

- Blade
 - Boom swing function
 - Rubber or Steel tracks
 - Hydraulic quick coupler
 - Auxiliary valve and piping (arm end)
 - 2way control pattern change
 - Cylinder cover (boom, blade)
 - Windshield washer
 - TOPS/FOPS Cabin
 - Defroster
 - Airconditioner
 - Joystick pilot controls
 - Arm rests
 - Suspension and reclining seat
 - Seat belt
 - Traveling levers and pedals
 - Traveling alarm
 - Built-in type boom light
 - Exterior cabin work light
 - Operation manual
- (Please note that the standard equipment may vary from this list. Consult your Yanmar dealer for confirmation.)

Note : All information presented in this Brochure is subject to change without notice



YANMAR CONSTRUCTION EQUIPMENT CO.,LTD.

EXPORT DEPT. CONSTRUCTION
1717-1 Kumano, Chikugo, Fukuoka 833-0055 JAPAN
TEL. (0942) 53-5465 FAX. (0942) 53-5132
<http://www.yanmar.co.jp>

YANMAR AMERICA CORP.

CONSTRUCTION EQUIPMENT DEPT.
101 International Parkway, Adairsville, GA 30103, U.S.A.
TEL:770-877-7570 FAX:770-877-7572
<http://www.yanmar.com>